

EchoLink

Control codes:

- 05+node number: connect by node number
- 0536: disable EchoLink connections (in and out)
- 0587: enable EchoLink connections
- #: disconnect